

**Item Number** \_\_\_\_\_

RAM-VB-135 & RAM-VB-135-SW1

# RAM No-Drill™ Seat Bases

National Products, Inc.

## Vehicle base for the HONDA CR-V (2005-2011)

### SPECIFICATIONS

**Placement**

Passenger side on the floor, under front seat

**Drilling Required**

No - uses existing seat bolts

**Seat Configuration**

Bucket

**Construction/Finish**

Steel/Black Powdercoat

**Dimensions**

A = 18.5", B = 7.5", C = 1.875"

Hole Centers = 15.875"

**Pole or Pedestal**

Sold Separately

**Weight**

5 lbs.

### Features

Installs in minutes with no drilling required

Low profile keeps mount away from passenger leg space

### Misc.

Rock solid construction

Lifetime warranty

National Products, Inc.

Phone: 206-763-8361

Fax: 206-763-9615

Address: 1205 S Orr St


Seattle, WA 98108

Website: [www.ram-mount.com](http://www.ram-mount.com)

Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)



RAM-VB-135-SW1

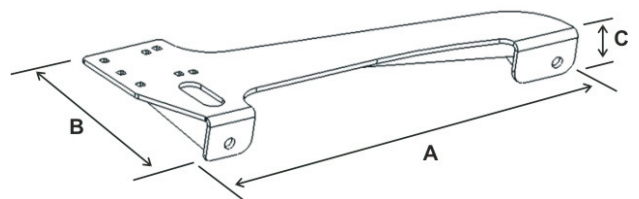

RAM-VB-135



**Item Number** \_\_\_\_\_

RAM-VB-135 &amp; RAM-VB-135-SW1

**RAM No-Drill™ Seat Bases**

National Products, Inc.

**Vehicle base for the  
HONDA CR-V (2005-2011)****INSTALLATION INSTRUCTIONS**

Longer bolts, no stand offs

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts. Store these bolts.
2. Align the holes in the base and seat frame legs with those in the floor board. The pedestal platform should be near the console.
3. Pass the supplied longer bolts with washers through to the holes in the floor board and start the thread by hand.
4. Using a socket wrench, fully tighten the bolts to secure the no drill base into the vehicle.
5. After a week of use, check seat bolts and re-tighten if necessary.

National Products, Inc.  
Phone: 206-763-8361  
Fax: 206-763-9615  
Address: 1205 S Orr St  
Seattle, WA 98108  
Website: [www.ram-mount.com](http://www.ram-mount.com)  
Email: [staff@ram-mount.com](mailto:staff@ram-mount.com)

