


# RAM® ADJUST-A-POLE™ ASSEMBLY INSTRUCTIONS

## PARTS INDEX:

- A. ADJUST-A-POLE CENTER SWIVEL (QTY. 1)
- B. ADJUST-A-POLE BASE (QTY. 2)
- C. 5/16"-18 x 2 1/2" HEX BOLT (QTY. 2)
- D. 5/16" STEEL FLAT WASHER (QTY. 2)
- E. 5/16"-18 NYLOCK NUT (QTY. 2)
- F. TELEPOLE HARDWARE PACK (QTY. 1)
  - 4 CARRIAGE BOLTS
  - 4 SPLIT LOCK WASHERS
  - 4 STEEL FLAT WASHERS
  - 4 STEEL HEX NUTS
  - 4 RUBBER CAPS

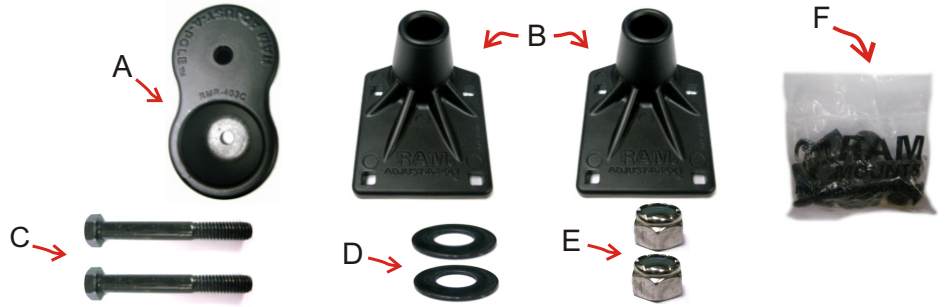

1. ASSEMBLE ADJUST-A-POLE BY ATTACHING (B) BASE TO (A) CENTER SWIVEL USING (C) BOLT, (D) WASHER AND (E) NUT AS SHOWN. **DO NOT TIGHTEN YET** (MUST BE ABLE TO PIVOT LOOSELY)



2. ATTACH ADJUST-A-POLE TO YOUR VEHICLE BASE USING HARDWARE PACK INCLUDED IN LAPTOP MOUNT KIT.

3. ATTACH LOWER POLE (INCLUDED IN LAPTOP MOUNT KIT) TO OPPOSITE SIDE USING (F) HARDWARE PACK.

4. ONCE BASE IS INSTALLED INTO YOUR VEHICLE, PIVOT LOWER POLE INTO POSITION SO THAT MOUNT MINIMALLY INTRUDES ON PASSENGER LEG SPACE, ALLOWS GLOVE BOX TO OPEN, AND DOES NOT BLOCK CONTROLS OR INTERFERE WITH SHIFTER MECHANISMS. TIGHTEN (C) NUTS WHEN PROPERLY POSITIONED.

**RAM Mounting Systems**  
 8410 Dallas Ave S  
 Seattle, WA 98108  
 Phone: (206) 763-8361  
 Fax: (206) 763-9615  
 www.rammount.com  
 support@rammount.com




This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

# RAM® ADJUST-A-POLE™ ASSEMBLY INSTRUCTIONS

## PARTS INDEX:

- A. ADJUST-A-POLE CENTER SWIVEL (QTY. 1)
- B. ADJUST-A-POLE BASE (QTY. 2)
- C. 5/16"-18 x 2 1/2" HEX BOLT (QTY. 2)
- D. 5/16" STEEL FLAT WASHER (QTY. 2)
- E. 5/16"-18 NYLOCK NUT (QTY. 2)
- F. TELEPOLE HARDWARE PACK (QTY. 1)
  - 4 CARRIAGE BOLTS
  - 4 SPLIT LOCK WASHERS
  - 4 STEEL FLAT WASHERS
  - 4 STEEL HEX NUTS
  - 4 RUBBER CAPS

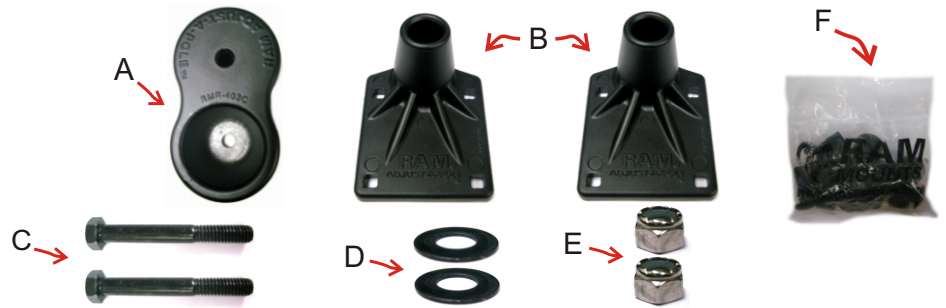

1. ASSEMBLE ADJUST-A-POLE BY ATTACHING (B) BASE TO (A) CENTER SWIVEL USING (C) BOLT, (D) WASHER AND (E) NUT AS SHOWN. **DO NOT TIGHTEN YET** (MUST BE ABLE TO PIVOT LOOSELY)



2. ATTACH ADJUST-A-POLE TO YOUR VEHICLE BASE USING HARDWARE PACK INCLUDED IN LAPTOP MOUNT KIT.

3. ATTACH LOWER POLE (INCLUDED IN LAPTOP MOUNT KIT) TO OPPOSITE SIDE USING (F) HARDWARE PACK.

4. ONCE BASE IS INSTALLED INTO YOUR VEHICLE, PIVOT LOWER POLE INTO POSITION SO THAT MOUNT MINIMALLY INTRUDES ON PASSENGER LEG SPACE, ALLOWS GLOVE BOX TO OPEN, AND DOES NOT BLOCK CONTROLS OR INTERFERE WITH SHIFTER MECHANISMS. TIGHTEN (C) NUTS WHEN PROPERLY POSITIONED.

**RAM Mounting Systems**  
 8410 Dallas Ave S  
 Seattle, WA 98108  
 Phone: (206) 763-8361  
 Fax: (206) 763-9615  
 www.rammount.com  
 support@rammount.com



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.