



# INSTRUCTIONS FOR GUN HOLSTER BRACKET CLIP

## Parts Index


- A . RAM HANDGUN HOLSTER BRACKET CLIP (QTY. 1)
- B. #10-24 X ½ BLACK PHILIPS DRIVE STEEL MACH. SCREW (QTY. 3)
- C. #10-24 BLACK THIN STAINLESS STEEL NYLOCK NUT (QTY. 3)
- D. 1/4"-20 X ½" BLACK CARRIAGE BOLT (QTY. 1)
- E. 1/4"-20 BLACK STEEL WING NUT (QTY. 1)

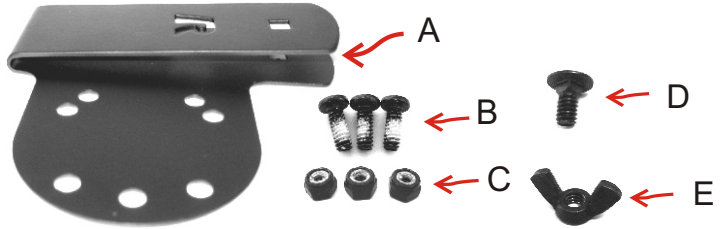


1. ATTACH BALL BASE TO BACK OF (A) BRACKET CLIP USING (B) SCREWS AND (C) NUTS.

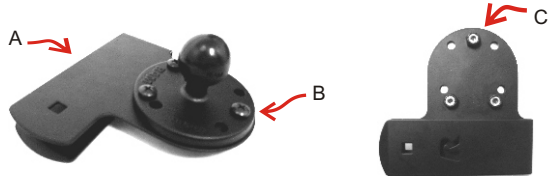

2. SLIDE (A) BRACKET CLIP THROUGH BELT INSERT ON HOLSTER.

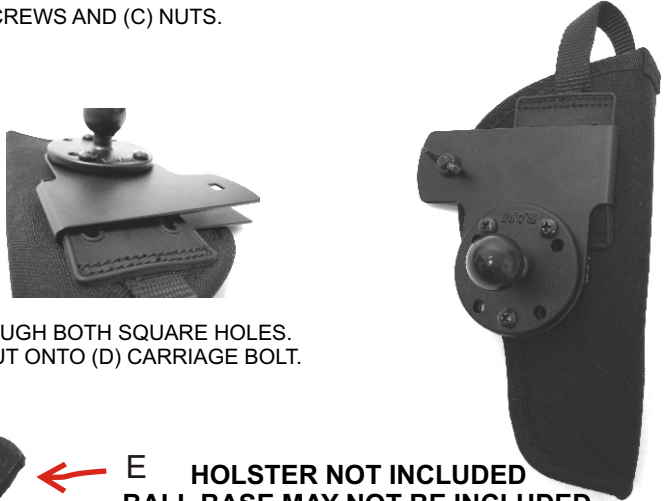

3. INSERT (D) CARRIAGE BOLT FROM UNDER BRACKET CLIP THROUGH BOTH SQUARE HOLES. PRESS ENDS OF BRACKET TOGETHER AND TIGHTEN (E) WINGNUT ONTO (D) CARRIAGE BOLT.

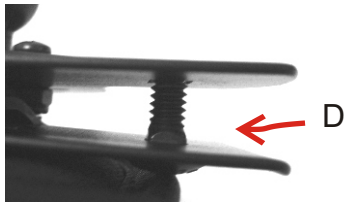

**HOLSTER NOT INCLUDED  
BALL BASE MAY NOT BE INCLUDED**




National Products, Inc., 8410 Dallas Ave S., Seattle, WA 98108, (206) 763-8361 [www.ram-mount.com](http://www.ram-mount.com)

RMR-INS-GUN1


# INSTRUCTIONS FOR GUN HOLSTER BRACKET CLIP

## Parts Index


- A . RAM HANDGUN HOLSTER BRACKET CLIP (QTY. 1)
- B. #10-24 X ½ BLACK PHILIPS DRIVE STEEL MACH. SCREW (QTY. 3)
- C. #10-24 BLACK THIN STAINLESS STEEL NYLOCK NUT (QTY. 3)
- D. 1/4"-20 X ½" BLACK CARRIAGE BOLT (QTY. 1)
- E. 1/4"-20 BLACK STEEL WING NUT (QTY. 1)

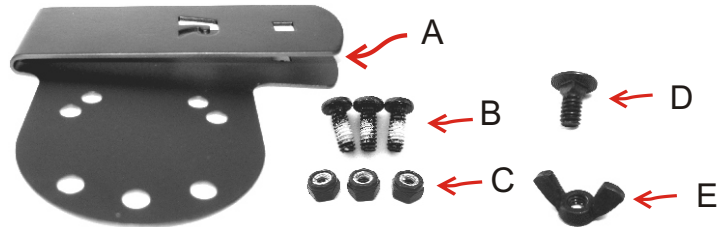


1. ATTACH BALL BASE TO BACK OF (A) BRACKET CLIP USING (B) SCREWS AND (C) NUTS.

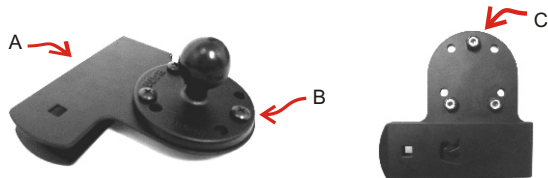

2. SLIDE (A) BRACKET CLIP THROUGH BELT INSERT ON HOLSTER.

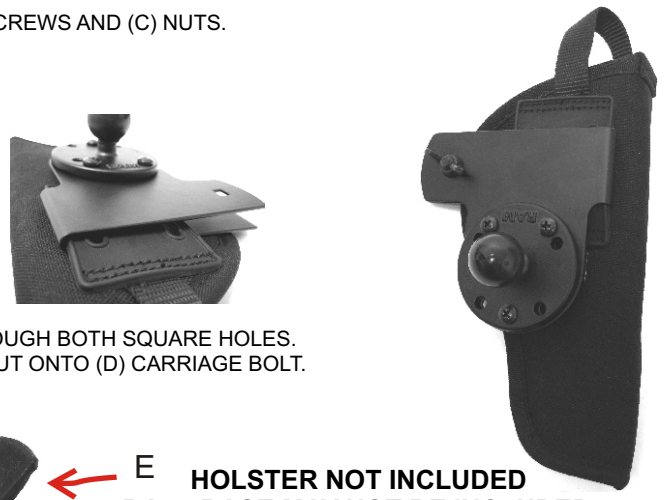

3. INSERT (D) CARRIAGE BOLT FROM UNDER BRACKET CLIP THROUGH BOTH SQUARE HOLES. PRESS ENDS OF BRACKET TOGETHER AND TIGHTEN (E) WINGNUT ONTO (D) CARRIAGE BOLT.

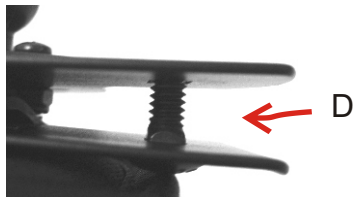

**HOLSTER NOT INCLUDED  
BALL BASE MAY NOT BE INCLUDED**



National Products, Inc., 8410 Dallas Ave S., Seattle, WA 98108, (206) 763-8361 [www.ram-mount.com](http://www.ram-mount.com)

RMR-INS-GUN1